

# **User's Guide**



i200 Series Scanners

# User's Guide

A-61167 P/N 3E9296

Introduction		 	. 1
Optional Accessories		 	. 1
Scanner Features		 	. 1
Paper Transport Features		 	. 2
Speed/Capacity (Throughput)		 	. 2
Image Quality Features		 	. 2
Maintenance		 	. 2
Preparing Documents for Scanning	•••	 	. 3
Recommended Documents		 	. 3
Safety Information	• •	 	. 4
Warning Labels	• •	 	. 4
User Precautions	• •	 	. 4
Safety and Regulatory Agency Approvals		 	. 5
Environmental Information		 	. 5
EMC Statements		 	. 6
For the United States		 	. 6
For Japan		 	. 6
For Taiwan		 	. 6
For the European Union (EU)		 	. 6
Acoustic Emission		 	. 6
Power System	• •	 	. 6
Installing the Scanner			7
Site Specifications			
System Requirements			
Unpacking the Scanner			
Registering Your Scanner			
Removing the Foam Sheet			
Scanner Components			
Front			
Rear			
Side			
Making Connections			
Installing the IEEE-1394 (FireWire) Card in the Host Computer			
Installing the Kodak Driver Software			
Power Setup			

Input and Output Trays	5
Attaching the Input Tray 1	5
Attaching the Output Tray 1	5
Tray Extenders and Side Guides 1	5
Adjusting the Output Tray 1	6
Closing the Input and Output Trays 1	6
Installing Optional Accessories 1	6
Using the Scanner	7
Starting and Stopping Scanning 1	7
Automatic Feeding 1	7
Continuous Feeding 1	8
Manual Feeding	8
Damaged Documents 1	8
Maintenance	9
Cleaning the Scanner	9
Cleaning the Separator Module 1	9
Cleaning the Feed Module	
Cleaning the Drive Rollers and Transport Area 2	
Cleaning the Imaging Guides 2	
Cleaning the Paper Path	
Replacing Wear Parts	24
Replacing the Separator Module	
Replacing the Feed Module	
Calibrating the Scanner 2	
Troubleshooting	27
Indicator Lights	
Lamps	
Clearing Document Jams 2	
Adjusting the Separator Module Tension 2	
System Is Not Responding	
Color Image Quality	
Problem Solving	
Transporting the Scanner	31

Appendix A	Specifications A-1
Appendix B	Supplies and Accessories B-1
Appendix C	KODAK i200 Series Imprinter C-1
Contents of	of the Imprinter Kit
Installing th	he Imprinter C-2
Removi	ng the Circuit Board Cover C-2
Attachir	ng the Imprinter Board and Cable C-3
Comple	ting the Imprinter Installation C-8
Installing th	he Ink Blotter Strips C-10
Purging ar	n Ink Cartridge C-11
Installing a	In Ink Cartridge
-	e Imprinter Position C-13
•	Naintenance C-14
•	ng Problems C-14
•	ed Life of Imprinter Components C-14
When the	ne Imprinter Is Not in Use C-14
•	ng an Ink Cartridge C-14
•	ng the Ink Blotter Strips C-15
Replaci	ng the Ink Cartridge Carrier C-16
	Overview C-17
	naracters C-17
Imprinter S	Specifications C-18
Appendix D	KODAK i200 Series Dockable Flatbed D-1
Contents of	of the Dockable Flatbed Kit D-1
Flatbed Sp	pecifications D-1
Installing th	he Dockable Flatbed D-1
Using the	Flatbed D-3
Book So	canning D-3
Calibrating	the Flatbed D-4
Cleaning the	he Flatbed D-5
After a Pov	wer Failure D-5
Removing	the Dockable Flatbed D-6
Appendix E	Installing Optional Memory E-1

	Before you install and operate your KODAK i200 Series Scanner, take a few minutes to read through this guide. It contains important information about installing, using, and maintaining your scanner.
	<ul> <li>KODAK i250 Scanner is a desktop <i>simplex</i> color scanner with an automatic document feeder.</li> </ul>
	<ul> <li>KODAK i260 Scanner is a desktop <i>duplex</i> color scanner with an automatic document feeder.</li> </ul>
<b>Optional Accessories</b>	<ul> <li>KODAK i200 Series Imprinter—prints a date, time, fixed string, and/or sequential number on document backs. For information about this accessory, refer to Appendix C, KODAK i200 Series Imprinter.</li> </ul>
	<ul> <li>KODAK i200 Series Dockable Flatbed—the A3 flatbed adds scanning capability for exception documents. For information about this accessory, refer to Appendix D, KODAK i200 Series Dockable Flatbed.</li> </ul>
	NOTE: For information about ordering the above accessories, refer to Appendix B, <i>Supplies and Accessories</i> .
	<ul> <li>Additional memory (SODIMM)—purchase a memory card at a computer supply retailer near you. For information about installing a memory card, refer to Appendix E, <i>Installing Optional Memory</i>.</li> </ul>
Scanner Features	<ul> <li>Excellent paper handling, image quality, and reliability</li> </ul>
	<ul> <li>Color at the same speed as bitonal and grayscale</li> </ul>
	Dual-stream output
	Easy to use and maintain
	<ul> <li>Handles a broad range of paper weights and sizes</li> </ul>
	<ul> <li>Small footprint; fits easily on a desktop or table</li> </ul>
	Low noise level
	Easy installation
	<ul> <li>ISIS and TWAIN device drivers are included on a CD that is packed with each scanner</li> </ul>
	International language support
	Automatic overlap/multifeed detection
	<ul> <li>All scanner models support multiple electrical power requirements for use worldwide</li> </ul>
	May be user-calibrated at any time
	Electronic red_areen_and blue color dropout

## Paper Transport Features

- Automatic and manual feeding
- · Multifeed detection by document length and/or document thickness
- Automatic feeder with operator-assisted "infinite" and single-sheet feeding

#### Speed/Capacity (Throughput)

The following speeds in pages per minute (ppm) are for color, grayscale, or bitonal output.

Resolution	Landscape A4		Portrait Letter	
	i250 Scanner	i260 Scanner	i250 Scanner	i260 Scanner
150 dpi	67 ppm	67 ppm (134 ipm)	53 ppm	53 ppm (106 ipm)
200 dpi	50 ppm	50 ppm (100 ipm)	40 ppm	40 ppm (80 ipm)
300 dpi	33 ppm	33 ppm (67 ipm)	26 ppm	26 ppm (53 ipm)

# **Image Quality Features** • Adaptive Threshold Processing (ATP), image compression, despeckle, and dithering for bitonal scanning

- Image capture optical resolution: 300 dpi
- Image output resolution: 75/100/150/200/300/400/600 dpi for bitonal, grayscale, and color scanning
- NOTE: Throughput speed at 400 dpi and 600 dpi is dependent on your PC configuration.
- Auto-color balancing (auto-white balancing) to ensure good color balance after calibration
- · Pixel and color correction for the best color image quality
- JPEG compression allows images to be viewed in many image viewers

### Maintenance

- Easily replaceable feed module and separator module
- Easy one-step paper jam clearance
- LED indicators for power, ready, paper jam, and operating conditions

#### **Preparing Documents** A batch of documents to be fed into the scanner must be arranged so that the leading edges of all documents are aligned and centered under the for Scanning automatic paper feeder; this allows the feeder to introduce documents into the scanner one at a time. Documents must be positioned face down for scanning. Staples and paper clips in documents may damage the scanner. Remove all staples and paper clips before scanning. • Torn, damaged, or crushed pages can be transported successfully through the scanner. However, no scanner can transport every possible type of damaged paper. If in doubt about whether a specific damaged document can be transported through the scanner, place the document in a clear protective sleeve. Sleeves should be manually fed, one at a time, folded edge first, while lifting the gap release lever. NOTE: Use the optional dockable flatbed to scan damaged documents. When scanning documents in a clear protective sleeve, the input tray guides must be adjusted to accommodate the width of the sleeve.

NOTE: Kodak scanners have been tested with a range of documents that represent the broad spectrum of document types found in the most common business applications. Optimal scanner performance is achieved when scanning documents within the recommended document specifications listed below. Scanning documents that are outside of these specifications may lead to undesirable results in terms of scanner reliability, image quality, and/or consumable life.

Materials	<ul><li>Virgin and recycled papers</li><li>Photographic papers</li></ul>	Clear protective sleeves meeting the size and thickness requirements in this section
Paper Types	• Bond • Laser	<ul><li>Inkjet</li><li>Offset</li></ul>
Paper Weights	The document feeder handles (13 to 110 lb.)	a broad range of paper weights from 50 to 200g
Minimum Document Size (Width x Length)	8.9 x 6.4 cm (3.5 x 2.5 in.)	
Maximum Document Size	With standard memory: 29.7 x	43.2 cm (11.7 x 17 in.)
(Width x Length)	With extended memory: 29.7 x	: 66.0 cm (11.7 x 26.0 in.)
	Dockable Flatbed: 29.7 x 43.2	cm (11.7 x 17 in.)
Paper Inks	NOTE: All inks on the paper m	ust be dry before scanning is started.
	<ul><li>Standard offset printing</li><li>Inkjet printer</li></ul>	<ul><li>Thermal transfer</li><li>Handwriting inks</li></ul>
Correction Fluids	NOTE: All correction fluids on t	the paper must be dry before scanning is started.
	<ul> <li>Liquid Paper<sup>®</sup></li> <li>Tipp-Ex<sup>®</sup></li> </ul>	<ul> <li>Wite-out<sup>®</sup></li> <li>Other, similar correction fluids</li> </ul>
Document Batch Height for Automatic Feeding	3	ents, the maximum height of the batched documents mately 100 sheets of 75g (20 lb.) paper.

#### **Recommended Documents** The following chart lists the recommended document attributes.

## Safety Information

 When placing the scanner, make sure that the electrical power outlet is located within 1.52 metres (5 feet) of the scanner and is easily accessible.


CAUTION: The power supply must only be used indoors in a dry location.

#### Warning Labels

CAUTION: High voltage. Avoid contact.



CAUTION: Hot surface. Avoid contact.

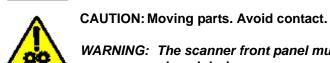

WARNING: The scanner front panel must be in place and closed during scanner operation.

WARNING: The printer access door must be in place and closed during scanner operation, except when changing the printhead location or replacing the ink cartridge.

> When the printer access door is removed, DO NOT allow loose clothing, jewelry, hair, or other objects to enter the printer opening.

### **User Precautions**

Users and their employer need to observe the common sense precautions applicable to the operation of any machinery. These include, but are not limited to, the following:

- Do not wear loose clothing, unbuttoned sleeves, etc.
- Do not wear loose jewelry, bracelets, bulky rings, long necklaces, etc.
- Hair should be kept short, using a hair net if needed, or by tying long hair up in a bun.
- · Remove all loose objects from the area that could be drawn into the machine.
- Take sufficient breaks to maintain mental alertness.

Supervisors should review their practices and make the compliance with these precautions a part of the job description for the operator of the KODAK i200 Series Scanners and any other mechanical devices.

# Safety and Regulatory Agency Approvals

The KODAK i200 Series Scanners conform to all applicable national and international product safety and electronic emission regulatory requirements. This includes, but is not limited to, the following:

- Underwriters Laboratories Inc. listing to UL 60950 Third Edition
- Underwriters Laboratories Inc. listing to CAN/CSA C22.2 No. 60950-00
   Third Edition
- TUV Rheinland of North America approval to EN60950
- CFR 47 Part 15, Subpart B (FCC Class A)
- Canadian ICES-003 Class A
- CE Mark (Europe)
- CISPR22 Class A
- EN55022:98 Class A
- EN55024
- EN61000-3-2
- EN61000-3-3
- C-Tick Mark (Australia)
- VCCI Class A (EMC)

# Environmental Information

- The KODAK i200 Series Scanners are designed to meet worldwide environmental requirements.
- The i200 Series Scanners' power supply cord jacket and the solder on the circuit boards contain lead. Disposal of lead may be regulated due to environmental considerations. For disposal or recycling information, contact your local authorities, or in the U.S.A., visit the Electronics Industry Alliance web site at www.eiae.org.
- Based on a review of the available information, disposal of the ink cartridge would not be regulated under U.S. EPA's (RCRA), U.S. Clean Water Act (CWA), or both. However, disposal may be subject to state or local landfill, incineration, or recycling requirements.
- Guidelines are available for the disposal of consumable items that are replaced during maintenance or service; follow local regulations or contact Kodak locally for more information.
- The product packaging is recyclable.
- · Parts are designed for reuse or recycling.
- The i200 Series Scanners are Energy Star compliant.

# **EMC Statements**

For the United States	This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
For Japan	This is a Class A product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective action. この装置は、第一種情報処理装置(商工業地域において使用されるべき情 報処理装置)で商工業地域での電波障害防止を目的とした情報処理装置等電 波障害自主規制協議会(VCCI)基準に適合しております。 従って、住宅地域またはその隣接した地域で使用すると、ラジオ、テレビ ジョン受信機等に受信障害を与えることがあります。 取扱説明書に従って正しい取り扱いをして下さい。
For Taiwan	WARNING: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures. 警告使用者: 這是甲類的資訊產品,在居住的環境中使用時, 可能會照造成射頻干擾,在這種情況下,使用者 會被要求採取某些適當的對策。
For the European Union (EU)	WARNING: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
Acoustic Emission	Maschinenlärminformationverordnung — 3, GSGV Der arbeitsplatzbezognene Emissionswert beträgt <70 dB(A). [Machine Noise Information Ordinance — 3, GSGV The operator-position noise emission value is <70 dB(A).]
Power System	This equipment was designed for connection to IT Power Systems.

Site Specifications	Place the scanner:
	<ul> <li>in a clean area with temperature and relative humidity typical of an office environment</li> </ul>
	IMPORTANT: Only use the scanner and power supply indoors in a dry location.
	• on a stable, level work surface capable of supporting the following weights:
	- i250 Scanner: 12.5 kg (27.5 lb.)
	- i260 Scanner: 13.9 kg (30.5 lb.)
	- i250 Scanner with optional flatbed accessory: 19.8 kg (43.5 lb.)
	- i260 Scanner with optional flatbed accessory: 21.2 kg (46.5 lb.)
	• within 1.52 metres (5 feet) of an electrical power outlet
	NOTE: For more information about the scanner specifications, refer to Appendix A, <i>Specifications</i> .
System Requirements	Following is the minimum system configuration to run the i250 Scanner or i260 Scanner.
	NOTE: The actual performance of the system depends on the scanning application, choice of scanning parameters, and the host computer configuration. If the scanner is not performing at the optimal speed, a faster computer and/or more RAM may be necessary to obtain the rated throughput.
	<ul> <li>IBM PC (or compatible) with a Pentium III 1GHz processor</li> </ul>
	Microsoft Windows 98SE, Windows Me, Windows 2000, or Windows XP
	<ul> <li>100 MB of available hard disk space (200 MB is recommended)</li> </ul>
	• 128 MB RAM
	Monitor (VGA)

### **Unpacking the Scanner**

The scanner box contains the following items:

- KODAK i200 Series Scanner
- Input tray
- Output tray
- Power supply
- Power cords (5) for U.S., U.K., Europe, Australia, Asia
- Installation CD
- Read Me Now sheet
- User's Guide (printed English version; User's Guide .pdf files in nine other languages are included on the Installation CD)
- Registration sheet
- · Cleaning materials
- Calibration target pack

NOTE: Save all packing materials for possible future use.

### Registering Your Scanner

It is very important that you register your scanner so Kodak can provide you with the best possible service and support that helps maintain your continuous scanning. Registering your scanner will help us provide you with firmware and hardware updates as they become available.

NOTE: The scanner must be registered before any service support can be provided.

You can register your scanner's new equipment warranty online at **www.kodak.com/go/DIwarrantyregistration**.

For more information about Kodak's service and support options, contact your reseller of Kodak Document Imaging products or visit us on the web at **www.kodak.com/go/Diserviceandsupport**.

# Removing the Foam Sheet

The scanner is packed with a foam sheet inside to protect the rollers during shipping. This foam sheet must be removed before you can begin scanning.

- 1. Lift the scanner out of the box and place it on a stable, level work surface that is capable of supporting it.
- 2. Lift up the scanner door release to unlatch the scanner door.
- 3. Pull up to open the scanner door.



4. Remove the foam sheet.




5. Lower the scanner door and press it down firmly until it latches into place.

# **Scanner Components**

#### Front

- 1 Scanner door
- 2 Gap release lever
- 3 Scanner door release
- 4 Paper guides
- 5 Input tray
- 6 Input tray extender
- 7 Front panel
- 8 Front panel latch

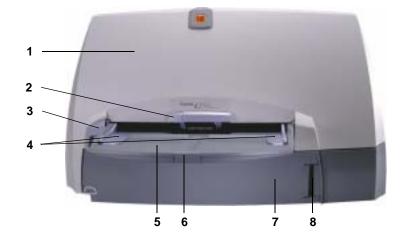

#### Rear

- 1 Imprinter access door (for optional imprinter)
- 2 Imprinter access door handle
- 3 IEEE-1394 (FireWire) port
- 4 Power input
- 5 Output tray
- 6 Output tray extender



#### Side

- 1 Output tray extender
- 2 Output tray
- 3 Indicator lights
- 4 Input tray
- 5 Input tray extender



#### Internal

- 1 Separator module
- 2 Drive rollers
- 3 Channels for ink blotter strips (for optional imprinter)
- 4 Rear roller cover
- 5 Front roller cover
- 6 Feed module



### **Making Connections**

Installing the IEEE-1394 (FireWire) Card in the Host Computer

#### Installing the Kodak Driver Software

Follow the instructions for installing the IEEE-1394 (FireWire) card and the Kodak driver software before you plug the scanner into the host computer.

IMPORTANT: You must install the software on the host computer before you install the scanner.

An IEEE-1394 six-pin connector is provided on the rear panel of the scanner for IEEE-1394 (FireWire) connectivity.

1. Install the IEEE-1394 (FireWire) card in the host computer as described by the instructions included with the card.

IMPORTANT: Use proper precautions to avoid static when you install the IEEE-1394 (FireWire) card in your computer.

- 2. Power up the host computer after the IEEE-1394 (FireWire) card installation is complete.
- 1. Insert the KODAK i200 Series Installation CD in the CD-ROM drive.

The installation program starts automatically.

- 2. Follow the onscreen instructions to install the KODAK TWAIN and ISIS drivers and the KODAK Scanner Validation Tool.
- 3. Attach the beaded end of the IEEE-1394 cable to the IEEE-1394 port on the back of the scanner.

IMPORTANT: Only use the IEEE-1394 cable that is supplied with the i200 Series Scanner.



4. Attach the other end of the IEEE-1394 cable to the host computer.

IMPORTANT: The i200 Series Scanner should be the only item plugged in to the IEEE-1394 (FireWire) card on the host computer.

Several power cords are supplied with the scanner. Use only the cord required for your type of power. Dispose of the unneeded power cords properly.

Use only the power supply that was provided with the scanner.

#### CAUTION: The power supply must only be used indoors in a dry location.

IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.

1. Press the side labeled "O" on the power switch to make sure that the power is off.



NOTE: The power switch is on the power supply.

- 2. Attach the power cord for your power type to the power supply.
- 3. Attach the power supply to the power input on the back of the scanner.



4. Plug the power cord into a power outlet.

NOTE: Make sure that the power outlet is located within 1.52 metres (5 feet) of the scanner and is easily accessible.

5. Press the side labeled "I" on the power switch to power up the scanner.

After you power up the scanner, the red and green indicator lights will illuminate. After approximately one minute, both lights go out. When the green indicator light comes back on, the scanner is ready to begin scanning. However, the host computer may require a few more seconds to detect the scanner. • If you are installing the scanner on a computer that is running Windows 2000, the following screen appears.



Select **Yes**. Kodak has successfully tested the i200 Series Scanners with Windows 2000.

Your scanner is now installed.

 If you are installing the scanner on a computer that is running Windows XP, the following screen appears.

Farred New Hardware Wil	and
	Welcome to the Found New Hardware Wizard
	This witted helps you install software for
	Kodel Scenner 200
	If your hardware came with an installation CD or Stappy disk, insert it now.
	What do you want the extand to do?
	(c) (initial the software astanaticals (Perconnerded) () Initial from a list or greatic location (Advanced)
	Click Next to continue.
	tion Ber

#### Select Next.

The following screen appears.



Select **Continue Anyway**. Kodak has successfully tested the i200 Series Scanners with Windows XP.

The following screen appears.


Faund New Hersteam We	nerd
	Completing the Found New Hardware Wizard The reading histolicity in others for Kodel Scawe 200
	Olek Frieh to dom the weard.

Select Finish.

Your scanner is now installed.

# **Input and Output Trays**

The input and output trays snap into place. They also may be adjusted to fit different document sizes. The input and output trays also may be folded flat up against the scanner to save space when the scanner is not in use.

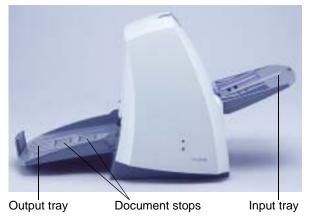

#### Attaching the Input Tray

- 1. Locate the input tray slots (large holes) on the scanner.
- 2. Align the input tray pins with the slots.
- 3. Press the input tray until it snaps into place.

#### Attaching the Output Tray

# Tray Extenders and Side Guides

- 1. Locate the output tray slots on the scanner.
- 2. Align the output tray pins with the slots.
- 3. Press the output tray until it snaps into place.
- Both the input and output trays have extenders to accommodate long documents. Grasp the tray extender and pull it out to the desired position.
- The input tray has side guides that allow you to adjust the feeder to fit different document sizes. Grasp the side guides and slide them to the desired position.



Output tray extender

Input tray extender

#### Adjusting the Output Tray

The output tray has three positions.



Lowest position for long documents

Middle position for letter or A4 documents

Highest position for checks

- Set the output tray to the lowest position when you are scanning long documents.
- Set the output tray to the middle position when you are scanning letteror A4-size documents.
- Set the output tray to the highest position with the first document stop when you are scanning checks.

Use the highest position with the second document stop raised when you are scanning documents that are 14 cm (5.5 in.) long.

- 1. Grasp the tray on each side.
- 2. Lift up the tray and move it up or down to the desired position.

# Closing the Input and Output Trays

You can move the scanner trays out of the way when the scanner is not in use.

- 1. Grasp the input tray.
- 2. Lift up the input tray until it rests against the scanner front.
- 3. Grasp the output tray.
- 4. Lift up the output tray until it rests against the scanner back.



#### Installing Optional Accessories

If you have purchased a KODAK i200 Series Imprinter, KODAK i200 Series Dockable Flatbed, and/or additional memory (SODIMM), refer to the appropriate appendix in this guide for installation instructions for the accessory.

# Starting and Stopping Scanning

Scanning is controlled by software developed for your application. To start and stop scanning, refer to the documentation provided with your software.

**Automatic Feeding** 

To scan a batch of documents, follow the guidelines for size, type, quantity, etc., in the *Introduction* section.

For faster throughput, feed documents into the automatic document feeder (ADF) in landscape orientation (longer side as the leading edge).

IMPORTANT: Staples and paper clips in documents may damage the scanner. Remove all staples and paper clips before scanning.

- 1. Align the leading edges of the stacked documents.
- 2. Position the leading edge of the documents **face down** and centered in the ADF.



- 3. Adjust the document feeder guides.
- 4. Adjust the output tray position, if necessary.
- 5. Pull out the output tray extender, if necessary.
- 6. Start scanning.

# **Continuous Feeding**

Continuous feeding allows you to place additional batches of documents in the feeder for "infinite" feeding (with operator assistance).

• When only a few documents from one batch remain in the feeder, place the next batch **face down** on top of those documents.



### **Manual Feeding**

Follow the guidelines for document size, type, weight, quantity, etc., in the *Introduction* section. Position the leading edge of the document **face down** and centered in the ADF, then start scanning.

#### **Damaged Documents**

1. Place the damaged document into a protective sleeve.



2. Position the sleeve **face down**, folded edge first, and centered in the ADF.



- 3. Lift the gap release lever, if necessary (this provides more clearance to ease document feeding).
- 4. Start scanning.

	The scanner will collect dust and other debris during routine scanning. Follow the procedures in this section and clean the scanner at least once per week.
	Clean the scanner and paper path daily if you are scanning carbonless paper or newsprint, or if you are using the imprinter.
	NOTES: Some debris from the rubber tires on the feed module and separator module is normal. Tire debris does not always mean that the tires are worn or damaged. After cleaning, inspect the tires for wear and replace the separator module or feed module if necessary.
	Staples and paper clips in documents may damage the scanner. Remove all staples and paper clips before scanning.
	There are two wear parts that you may replace: the feed module and the separator module.
	NOTE: To order cleaning supplies or replacement parts, refer to Appendix B, Supplies and Accessories.
Cleaning the Scanner	For best scanner performance, clean the feed module rollers, separator module rollers, imaging guides, transport area, and paper path at least once per week. Use only these cleaning materials:
	Kodak Digital Science Roller Cleaning Pads (Catalog No. 853-5981)
	<ul> <li>Staticide Wipes for KODAK Scanners (Catalog No. 896-5519)</li> </ul>
	Kodak Digital Science Transport Cleaning Sheets (Catalog No. 169-0783)
	Use of any other cleaning materials could damage your scanner. In addition to the recommended cleaning supplies, you may use a vacuum cleaner to remove debris from the scanner.
Cleaning the	1. Power down the scanner.
Separator Module	2. Remove any documents from the feeder area.
	3. Lift up the scanner door release to unlatch the scanner door.
	4. Pull up to open the scanner door.



5. Remove the separator module by pulling it down and lifting it off.



Separator module

6. Manually rotate and wipe the separator module rollers with a roller cleaning pad.



7. Inspect the rollers.

If the rollers show signs of wear or damage, replace the separator module.

- 8. Insert the separator module and align the shaft ends.
- 9. Press until the separator module clicks into place.
- 10. Go to the next section to clean the feed module.


#### **Cleaning the Feed Module**

1. Push against the raised edge on the left side of the front roller cover to the side and pull the cover up and out to remove it.



Front roller cover

- NOTE: You may need to lift the input tray slightly to remove the front roller cover.
- 2. Remove the feed module by pushing it to the right and lifting it out.

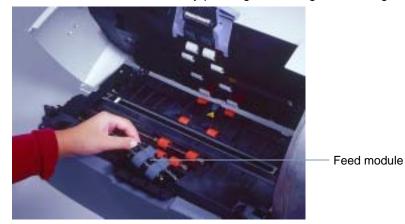

3. Manually rotate and wipe the feed module rollers with a roller cleaning pad.



4. Inspect the feed module.

If the tires show signs of wear or damage, replace the feed module.

- 5. Remove any dust or debris from the tray area under the feed module and the front roller cover.
- 6. Insert the feed module by aligning the pins and pushing it toward the right to fit it into position.
- 7. Re-install the front roller cover.
- 8. Go to the next section to clean the drive rollers and transport area.

#### lers 1. Manually rotate and wipe the drive rollers with a roller cleaning pad.



- 2. Clean any dust or debris in the slots around the drive rollers.
- 3. Wipe the upper and lower transport areas with a roller cleaning pad.





4. Dry the transport area with a lint-free cloth.

# Cleaning the Drive Rollers and Transport Area

5. Push against the raised edge on the left side of the rear roller cover and pull the cover up and out to remove it.



Rear roller cover

- 6. Remove any dust or debris under the rear roller cover.
- 7. Re-install the rear roller cover.
- 8. Go to the next section to clean the imaging guides.
- 1. Wipe the upper and lower imaging guides with a Staticide Wipe.





- 2. Dry the imaging guides with a lint-free cloth.
- 3. Close the scanner door firmly.
- 4. Go to the next section to clean the paper path.
- 1. Remove the wrapping from the Transport Cleaning Sheet.
  - 2. Adjust the paper feeder guides to fit the cleaning sheet.
  - 3. Feed the cleaning sheet (adhesive side up) through the scanner in portrait orientation until all residue is removed from the drive rollers.
  - 4. Adjust the feeder guides to fit, then feed the cleaning sheet (adhesive side up) through the scanner in landscape orientation until all residue is removed from the drive rollers.
  - 5. Using the same cleaning sheet, repeat Steps 3 and 4, but feed the cleaning sheet through the scanner with the adhesive side down until all residue is removed from the drive rollers.

NOTE: When a cleaning sheet gets very dirty, discard it and use a new one.

#### Cleaning the Imaging Guides

#### **Cleaning the Paper Path**

### **Replacing Wear Parts**

The expected life of customer-replaceable wear parts is shown below.

- KODAK Separator Module for i200 Series Scanners: 200,000 document pages
- KODAK Feed Module for i200 Series Scanners: 500,000 document pages
- NOTES: The composition of the roller materials was engineered to provide the ultimate in feeding reliability across the broadest range of document types, sizes, and thicknesses. Expected life figures are offered as guidelines for operations that follow the recommended scanner cleaning procedures in this section and that scan document types within the recommended paper types (refer to "Preparing Documents for Scanning" in the *Introduction* section).

Your experience may vary. Certain paper types (such as carbonless paper or newsprint), failure to clean regularly, and/or use of non-recommended cleaning solvents can shorten roller life.

- Replacing the Separator Module
- 1. Power down the scanner.
- 2. Remove any documents from the feeder area.
- 3. Lift up the scanner door release to unlatch the scanner door.
- 4. Pull up to open the scanner door.
- 5. Remove the separator module by pulling it down and lifting it off.



Separator module

- 6. Insert the new separator module and align the shaft ends.
- 7. Press until the separator module clicks into place.
- 8. Lower the scanner door and press it down firmly until it latches into place.

#### **Replacing the Feed Module**

- 1. Power down the scanner.
- 2. Remove any documents from the feeder area.
- 3. Lift up the scanner door release to unlatch the scanner door.
- 4. Pull up to open the scanner door.
- 5. Push against the raised edge on the left side of the front roller cover and pull the cover up and out to remove it.

NOTE: You may need to lift the input tray slightly to remove the roller cover.



Front roller cover

6. Remove the feed module by pushing it to the right and lifting it out.



- 7. Remove any dust or debris from the tray area under the feed module.
- 8. Insert a new feed module by aligning the pins and pushing it toward the right to fit it into position.
- 9. Re-install the front roller cover.
- 10. Lower the scanner door and press it down firmly until it latches into place.

# Calibrating the Scanner

Calibration optimizes the optical system in your scanner in order to achieve the best overall quality of scanned images. Frequent calibration is not needed or recommended.

- NOTE: The screens shown in this section are for the TWAIN driver. Your screens may be different.
- 1. Allow the lamps to warm up for three minutes.
- 2. Click on Calibrate in the Imaging tab.

Prov Draw		-	
Cries Stone		-	4
		114	4
	Proclater (IDE	The second second	
	Centee	Internet: Dates To Brancole	-
ing their	0.44+	*	
Agen Towney	140#		

The Image Chain Calibration dialog box appears.

Image Chain Cal	Ibration	2 🛙
appropriate buttery	badoo tagait into Rei soaree. Io-confinae. If langs have not calibration vell tail Hischanista	
	Ultransiste	
	Cellun	

3. Click Calibrate.

A message appears.



4. Place the calibration target in the scanner ADF.

Use the 30.5 cm (12 in.) square calibration target (Catalog. No. 127-1436) that is included with your scanner.

5. Click **OK**.


Calibration begins. A confirmation box appears when the ADF calibration has finished.



6. Click OK.

### **Indicator Lights**

There are two indicator lights on the scanner.

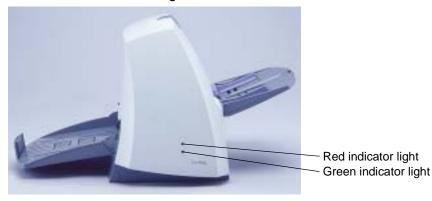

Green on—ready to scan

Green flashing—scanner is busy

Red on-error mode

Red and green on-scanner is powering up

After you power up the scanner, the red and green indicator lights will illuminate. After approximately one minute, both lights go out. When the green indicator light comes back on, the scanner is ready to begin scanning. However, the host computer may require a few more seconds to detect the scanner.

LampsThe scanner has a lamp saver feature to prolong lamp life. The lamps shut off<br/>after five minutes of scanner idle time.

# Clearing Document Jams

- 1. Remove any documents from the feeder area.
- 2. Lift up the scanner door release to unlatch the scanner door.
- 3. Pull up to open the scanner door.
- 4. Locate the jammed document and remove it.
- 5. Lower the scanner door and press it down firmly until it latches into place.

# Adjusting the Separator Module Tension

Most documents will feed perfectly fine with the default separator module tension. However, there may be times when you are scanning documents that are lighter or heavier. Two additional positions for the separator module spring allow you to adjust the tension to improve the scanning these types of documents. The spring can be placed in one of the two channels or it can be released and left on the flat surface.





Normal documents (default position)



Light documents

1. Power down the scanner.

**Heavy documents** 

- 2. Remove any documents from the feeder area.
- 3. Lift up the scanner door release to unlatch the scanner door.
- 4. Pull up to open the scanner door.
- 5. Remove the separator module by pulling it down and lifting it off.
- 6. Pull the spring gently into the position you want.



- 7. Re-install the separator module and align the shaft ends.
- 8. Press until the separator module clicks into place.

System Is Not Responding		he scanner and/or host computer are not responding, perform the lowing steps.
	1.	Power down the computer.
	2.	Power down the scanner.
	3.	Disconnect the IEEE-1394 (FireWire) cable from the IEEE-1394 port on the back of the scanner.
	4.	Power up the computer.
	5.	Power up the scanner.
		After you power up the scanner, the red and green indicator lights will illuminate. After approximately one minute, both lights go out. When the green indicator light comes back on, the scanner is ready to begin scanning. However, the host computer may require a few more seconds to detect the scanner.
	6.	Wait until the scanner light is green and no longer in the power-up mode.
	7.	Attach the IEEE-1394 cable to the IEEE-1394 port on the back of the scanner.
	8.	Wait a few moments for the host computer's operating system to recognize the scanner.
		The scanner is now ready to use.
Color Image Quality		lor image quality is highly subjective. Here are some things to consider ien scanning in color:
		The difference in the color outputs of scanners, printers, and monitors can affect the perception of the scanned document.
		Computer displays and printer output can vary from model to model, and from manufacturer to manufacturer. An image may be acceptable on one display and unacceptable on another.
		Area lighting (fluorescent, natural, incandescent) can affect color perception.
		The appearance of a colored area within an image can be perceived differently, based on what surrounds it.
		The characteristics and condition of a document can have an impact on color consistency.
		Color requirements may differ between environments (e.g., in a business document environment, images are generally viewed on a monitor, whereas in a "print on demand" environment, scanned images are printed).
	То	ensure that your scanner is delivering the best image:
		Clean the scanner. Contamination within the scanner degrades image quality. (Refer to the <i>Maintenance</i> section for cleaning information.)
		Calibrate the scanner occasionally and make sure that the calibration target is clean and unwrinkled.

# **Problem Solving**

Occasionally, you may experience a problem with your scanner. In many cases, you can easily fix the problem yourself. To perform suggested maintenance, refer to the *Maintenance* section. You may also need to check your scanning application.

Problem	Possible Solution
The scanner will not scan/	Make sure that:
feed documents	<ul> <li>the power cord is plugged in and the power is on.</li> </ul>
	<ul> <li>the scanner and printer access doors are completely closed.</li> </ul>
	<ul> <li>the proper power-up sequence was followed, the scanner's green light is on, and the software has enabled scanning.</li> </ul>
	<ul> <li>documents are making contact with the feed module.</li> </ul>
	<ul> <li>the height of batched documents is less than 10.2 mm (0.4 in.) or approximately 100 sheets of 75g (20 lb.) paper</li> </ul>
	<ul> <li>documents meet specifications for size, weight, and type, etc.</li> </ul>
	<ul> <li>for thicker documents, you lift the gap release button during feeding.</li> </ul>
	<ul> <li>you check the feed module and separator module for signs of wear, and replace these parts if necessary.</li> </ul>
	You can also power the scanner down and power up again or follow the instructions in "System Is Not Responding" in this section.
Image quality is poor or	Make sure that:
has decreased	• the scanner is clean. Refer to the Maintenance section.
	• the scanner is calibrated. Refer to the Maintenance section.
Calibration has failed	Make sure that:
	<ul> <li>the lamps have been on at least three minutes.</li> </ul>
	<ul> <li>you are using a proper calibration target. Use the 30.5 cm (12 in.) square calibration target (Catalog. No. 127-1436) that is included with your scanner.</li> </ul>
	<ul> <li>the transport area is clear of obstructions.</li> </ul>
"False" paper jams	<ul> <li>Make sure that the paper transport area is clean.</li> </ul>
are occurring	• If you are scanning documents that contain holes (e.g., 3-hole punch paper), rotate the documents and rescan.
Documents are jamming	Make sure that:
	<ul> <li>the output tray and guides are adjusted for the length of documents being scanned.</li> </ul>
	<ul> <li>all jammed documents have been removed from the paper transport area.</li> </ul>
	<ul> <li>documents meet specifications for size, weight, and type, etc.</li> </ul>
	<ul> <li>all staples and paper clips have been removed from the documents.</li> </ul>
	<ul> <li>the separator module and feed module are clean and properly installed.</li> </ul>
	• the drive rollers are clean.
	<ul> <li>the imaging guides are clean.</li> </ul>
35.6 cm (14 in.) or longer documents are not feeding or are jamming	Make sure that the input and output tray extenders are pulled out to provide support for long documents.

Problem	Possible Solution
Documents are skewed during scanning	Make sure that:
	<ul> <li>the document side guides are adjusted to fit the documents being fed.</li> </ul>
	<ul> <li>documents are being fed perpendicular to the feed module.</li> </ul>
	<ul> <li>documents are being fed in the center of the ADF.</li> </ul>
	<ul> <li>all staples and paper clips have been removed from the documents.</li> </ul>
	<ul> <li>the feed module, separator module, and drive rollers are clean.</li> </ul>
Scanner pauses excessively during scanning	Make sure that:
	<ul> <li>the host computer meets minimum requirements for scanning.</li> </ul>
	<ul> <li>there is enough free space on the hard disk drive.</li> </ul>
	<ul> <li>all other applications are closed.</li> </ul>
	<ul> <li>the scanner has the correct amount of memory installed for the documents being scanned.</li> </ul>
	You can also try changing the scanning options (compression, etc.) in your scanning software.
Documents are multifeeding	Make sure that:
	<ul> <li>the leading edges of all batched documents are centered in the ADF so that each document will come in contact with the feed rollers.</li> </ul>
	<ul> <li>the feed module and separator module are clean and not worn.</li> </ul>
	<ul> <li>documents with an unusual texture or surface are fed manually.</li> </ul>
Roller marks or streaks appear on documents after scanning	Clean the feed module, separator module, and drive rollers. Refer to the <i>Maintenance</i> section.
Vertical lines appear on	• Clean the imaging guides. Refer to the <i>Maintenance</i> section.
the image	<ul> <li>Calibrate the scanner. Refer to the Maintenance section.</li> </ul>

# Transporting the Scanner

If it becomes necessary to transport the scanner after installation, you must repack the scanner using the original packaging materials. If you do not have the original packaging materials, contact your supplier.

- 1. Power down the computer.
- 2. Power down the scanner.
- 3. Disconnect the power cord from the back of the scanner.
- 4. Disconnect the IEEE-1394 (FireWire) cable from the IEEE-1394 port on the back of the scanner.
- 5. Place the foam end caps on each end of the scanner.
- 6. Place the scanner in the box.
- 7. Place the power cord and power supply in the box.
- 8. Tape down the input and output trays to secure them.
- 9. Close the box.

The scanner is now ready for moving.

I260 Scanner: duplex color scanner with automatic document feederImage Capture Resolution75 dpi to 300 dpi color and bitonalADF Scanning Speed50 ppm: 200 dpi landscape A4 42 ppm: 200 dpi portrait letterScanning OutputBitonal, 256-level, 8-bit grayscale, 24-bit colorOutput Resolution75 to 600 dpiFile Format OutputColor: compressed JPEG, uncompressed TIFFBitonal:G4 TIFF, uncompressed TIFFBitonal:G4 TIFF, uncompressed TIFFScan AreaWidth:0.4 to 29.7 cm (2.5 to 11.7 in.)Length:8.9 to 43.2 cm (3.5 to 17 in.) with standard memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory 8.9 to 5,000 pages/dayADF Capacity100 sheets of 20 lb. bond paper (up to A3) 200-sheet output trayRecommended Daily VolumeUp to 5,000 pages/dayLight SourceXenon lampElectrical Requirements100-127V, AC 50/60 Hz, 2.0 ampsScanner with flatbed: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingScanner With St64-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 35.4 cm (14.4 in.) with trays folded up Witth: 82.5 cm (24.6 in.) Depth: 28.5 cm (24.6 in.)Depth: 28.6 cm (26.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays setended	Scanner Type	i250 Scanner: simplex color scanner with automatic document feeder			
Image Capture Resolution         75 dpi to 300 dpi color and bitonal           ADF Scanning Speed         50 ppm: 200 dpi landscape A4           42 ppm: 200 dpi portrait letter           Scanning Output         Bitonal, 256-level, 8-bit grayscale, 24-bit color           Output Resolution         75 to 600 dpi           File Format Output         Color: compressed JPEG, uncompressed TIFF           Bitonal:         G4 TIFF, uncompressed TIFF           Bitonal:         G4 TIFF, uncompressed TIFF           Scan Area         Width:         6.4 to 29.7 cm (2.5 to 11.7 in.)           Length:         8.9 to 66.0 cm (3.5 to 26.0 in.) with standard memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory 8.9 to 65.0 cm (2.5 to 26.0 in.) with extended memory           ADF Capacity         100 sheets of 20 lb. bond paper (up to A3) 200-sheet output tray           Recommended Daily Volume         Up to 5,000 pages/day           Light Source         Xenon lamp           Electrical Requirements         100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 amps           Scanner Power         Scanner with flatbed: 24 Vdc/3.7 A max, operating           Scanner With IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.           Scanner Dimensions         Height: 35.4 cm (14.0 in.) with trays folded u					
ADF Scanning Speed       50 ppm: 200 dpi landscape A4         42 ppm: 200 dpi portrait letter         Scanning Output       Bitonal, 256-level, 8-bit grayscale, 24-bit color         Output Resolution       75 to 600 dpi         File Format Output       Color: compressed JPEG, uncompressed TIFF         Bitonal:       G4 TIFF, uncompressed TIFF         Bitonal:       G4 TIFF, uncompressed TIFF         Scan Area       Width:       6.4 to 29.7 cm (2.5 to 11.7 in.)         Length:       8.9 to 43.2 cm (3.5 to 17 in.) with standard memory         8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory       8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory         ADF Capacity       100 sheets of 20 lb. bond paper (up to A3)         200-sheet output tray       200-sheet output tray         Recommended       Up to 5,000 pages/day         Daily Volume       100-127V, AC 50/60 Hz, 4.0 amps         200-240V, AC 50/60 Hz, 2.0 amps       Scanner With ADF: 24 Vdc/3.7 A max, operating         Scanner Power       Scanner with ADF: 24 Vdc/3.7 A max, operating         Scanner Dimensions       Height:         35.4 cm (14.0 in.) without trays       36.4 cm (14.4 in.) with trays folded up         Width:       62.5 cm (24.6 in.)         Depth:       28.7 cm (11.3 in.) without trays       30.0 cm (11.8 in.) with trays folded up <th>Image Conture Recolution</th> <th></th>	Image Conture Recolution				
42 ppm: 200 dpi portrait letter         Scanning Output       Bitonal, 256-level, 8-bit grayscale, 24-bit color         Output Resolution       75 to 600 dpi         File Format Output       Color: compressed JPEG, uncompressed TIFF         Bitonal:       G4 TIFF, uncompressed TIFF         Bitonal:       G4 TIFF, uncompressed TIFF         Scan Area       Width: 6.4 to 29.7 cm (2.5 to 11.7 in.)         Length:       8.9 to 43.2 cm (3.5 to 17 in.) with standard memory         8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory         ADF Capacity       100 sheets of 20 lb. bond paper (up to A3)         200-sheet output tray         Recommended         Daily Volume         Light Source         Xenon lamp         Electrical Requirements         200-240V, AC 50/60 Hz, 4.0 amps         200-240V, AC 50/60 Hz, 2.0 amps         Scanner With ADF: 24 Vdc/3.7 A max, operating         Scanner with flatbed: 24 Vdc/3.7 A max, operating         Scanner with flatbed: 24 Vdc/3.7 A max, operating         Scanner With S5.4 cm (14.0 in.) without trays         36.4 cm (14.4 in.) with trays folded up         Width:         62.5 cm (24.6 in.)         Depth:         28.7 cm (11.3 in.) without trays         30.0 cm (11.8 in.) with trays folded					
Scanning Output       Bitonal, 256-level, 8-bit grayscale, 24-bit color         Output Resolution       75 to 600 dpi         File Format Output       Color: compressed JPEG, uncompressed TIFF         Grayscale: compressed JPEG, uncompressed TIFF         Bitonal:       G4 TIFF, uncompressed TIFF         Scan Area       Width: 6.4 to 29.7 cm (2.5 to 11.7 in.)         Length:       8.9 to 43.2 cm (3.5 to 17 in.) with standard memory         8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory         ADF Capacity       100 sheets of 20 lb. bond paper (up to A3)         200-sheet output tray         Recommended         Daily Volume       Up to 5,000 pages/day         Light Source       Xenon lamp         Electrical Requirements       100-127V, AC 50/60 Hz, 4.0 amps         200-240V, AC 50/60 Hz, 2.0 amps       Scanner with flatbed: 24 Vdc/4.2 A max, operating         Scanner Power       Scanner with 154-240         MPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height:         35.4 cm (14.4 in.) with trays folded up         Width:       62.5 cm (24.6 in.)         Depth:       28.7 cm (11.3 in.) without trays         30.0 cm (11.8 in.) with trays folded up       68.1 cm (26.8 in.) with trays extended   <	ADF Scanning Speed				
Output Resolution         75 to 600 dpi           File Format Output         Color:         compressed JPEG, uncompressed TIFF           Bitonal:         G4 TIFF, uncompressed TIFF           Bitonal:         G4 TIFF, uncompressed TIFF           Scan Area         Width:         6.4 to 29.7 cm (2.5 to 11.7 in.)           Length:         8.9 to 43.2 cm (3.5 to 17 in.) with standard memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory           ADF Capacity         100 sheets of 20 lb. bond paper (up to A3) 200-sheet output tray           Recommended Daily Volume         Up to 5,000 pages/day           Light Source         Xenon lamp           Electrical Requirements         100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 amps           Scanner Power         Scanner with flatbed: 24 Vdc/3.7 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operating           Power Source         Philong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.           Scanner Dimensions         Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) with trays folded up 68.1 cm (26.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays folded up					
File Format Output       Color:       compressed JPEG, uncompressed TIFF         Grayscale:       compressed JPEG, uncompressed TIFF         Bitonal:       G4 TIFF, uncompressed TIFF         Scan Area       Width:       6.4 to 29.7 cm (2.5 to 11.7 in.)         Length:       8.9 to 43.2 cm (3.5 to 17 in.) with standard memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory         ADF Capacity       100 sheets of 20 lb. bond paper (up to A3)         200-sheet output tray       200-sheet output tray         Recommended Daily Volume       Up to 5,000 pages/day         Light Source       Xenon lamp         Electrical Requirements       100-127V, AC 50/60 Hz, 4.0 amps         200-240V, AC 50/60 Hz, 2.0 amps       Scanner with flatbed: 24 Vdc/4.2 A max, operating         Scanner Power       Scanner with flatbed: 24 Vdc/3.7 A max, operating         Power Source       Phihong PSM 1564-240         IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.6 cm (24.6 in.)         Depth:       28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up         Width:       62.5 cm (24.6 in.)         Depth:       28.7 cm (2.6 in.) with trays folded up         Width:       62.6 cm.) with trays folded up	Scanning Output	Bitonal, 256-level, 8-bit grayscale, 24-bit color			
Grayscale:compressed JPEG, uncompressed TIFF Bitonal:G4 TIFF, uncompressed TIFFScan AreaWidth:6.4 to 29.7 cm (2.5 to 11.7 in.) Length:8.9 to 43.2 cm (3.5 to 17 in.) with standard memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memoryADF Capacity100 sheets of 20 lb. bond paper (up to A3) 200-sheet output trayRecommended Daily VolumeUp to 5,000 pages/dayLight SourceXenon lampElectrical Requirements100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 ampsScanner PowerScanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingPower SourcePhihong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays stended	Output Resolution	75 to 600 dpi			
Bitonal:G4 TIFF, uncompressed TIFFScan AreaWidth:6.4 to 29.7 cm (2.5 to 11.7 in.) Length:Length:8.9 to 43.2 cm (3.5 to 17 in.) with standard memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memoryADF Capacity100 sheets of 20 lb. bond paper (up to A3) 200-sheet output tray200-sheet output trayRecommended Daily VolumeUp to 5,000 pages/day100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 ampsScanner PowerScanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingPower SourcePhihong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 35.4 cm (14.0 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) with trays folded up 68.1 cm (26.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays sextended	File Format Output	Color: compressed JPEG, uncompressed TIFF			
Scan Area       Width:       6.4 to 29.7 cm (2.5 to 11.7 in.)         Length:       8.9 to 43.2 cm (3.5 to 17 in.) with standard memory         8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory         ADF Capacity       100 sheets of 20 lb. bond paper (up to A3)         200-sheet output tray         Recommended         Daily Volume         Light Source         Xenon lamp         Electrical Requirements         100-127V, AC 50/60 Hz, 4.0 amps         200-240V, AC 50/60 Hz, 2.0 amps         Scanner Power         Scanner with ADF: 24 Vdc/4.2 A max, operating         Scanner with flatbed: 24 Vdc/3.7 A max, operating         Power Source       Phihong PSM 1564-240         IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height:         35.4 cm (14.0 in.) without trays         36.4 cm (14.4 in.) with trays folded up         Width:       62.5 cm (24.6 in.)         Depth:       28.7 cm (11.3 in.) without trays         30.0 cm (11.8 in.) with trays folded up       68.1 cm (26.8 in.) with trays folded up		Grayscale: compressed JPEG, uncompressed TIFF			
Length:8.9 to 43.2 cm (3.5 to 17 in.) with standard memory 8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memoryADF Capacity100 sheets of 20 lb. bond paper (up to A3) 200-sheet output trayRecommended Daily VolumeUp to 5,000 pages/dayLight SourceXenon lampElectrical Requirements100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 ampsScanner PowerScanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingPower SourcePhihong PSM 1564-240 MPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays scheded		Bitonal: G4 TIFF, uncompressed TIFF			
8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory         ADF Capacity       100 sheets of 20 lb. bond paper (up to A3)         200-sheet output tray         Recommended Daily Volume       Up to 5,000 pages/day         Light Source       Xenon lamp         Electrical Requirements       100-127V, AC 50/60 Hz, 4.0 amps         200-240V, AC 50/60 Hz, 2.0 amps         Scanner Power       Scanner with ADF: 24 Vdc/4.2 A max, operating         Scanner with flatbed: 24 Vdc/3.7 A max, operating         Power Source       Phihong PSM 1564-240         IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up         Width:       62.5 cm (24.6 in.)         Depth:       28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended	Scan Area	Width: 6.4 to 29.7 cm (2.5 to 11.7 in.)			
ADF Capacity       100 sheets of 20 lb. bond paper (up to A3)         200-sheet output tray       200-sheet output tray         Recommended Daily Volume       Up to 5,000 pages/day         Light Source       Xenon lamp         Electrical Requirements       100-127V, AC 50/60 Hz, 4.0 amps         200-240V, AC 50/60 Hz, 2.0 amps       200-240V, AC 50/60 Hz, 2.0 amps         Scanner Power       Scanner with ADF: 24 Vdc/4.2 A max, operating         Scanner with flatbed: 24 Vdc/3.7 A max, operating         Power Source       Phihong PSM 1564-240         IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up         Width:       62.5 cm (24.6 in.)         Depth:       28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays sextended		Length: 8.9 to 43.2 cm (3.5 to 17 in.) with standard memory			
200-sheet output trayRecommended Daily VolumeUp to 5,000 pages/dayLight SourceXenon lampElectrical Requirements100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 ampsScanner PowerScanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingPower SourcePhihong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended		8.9 to 66.0 cm (3.5 to 26.0 in.) with extended memory			
Recommended Daily Volume       Up to 5,000 pages/day         Light Source       Xenon lamp         Electrical Requirements       100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 amps         Scanner Power       Scanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operating         Power Source       Phihong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up         Width: 62.5 cm (24.6 in.)       Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended	ADF Capacity	100 sheets of 20 lb. bond paper (up to A3)			
Daily Volume       Image: Provide and Provided And Provi		200-sheet output tray			
Electrical Requirements100-127V, AC 50/60 Hz, 4.0 amps 200-240V, AC 50/60 Hz, 2.0 ampsScanner PowerScanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingPower SourcePhihong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended	Recommended Daily Volume				
200-240V, AC 50/60 Hz, 2.0 ampsScanner PowerScanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingPower SourcePhihong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 	Light Source	Xenon lamp			
Scanner PowerScanner with ADF: 24 Vdc/4.2 A max, operating Scanner with flatbed: 24 Vdc/3.7 A max, operatingPower SourcePhihong PSM 1564-240 IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.Scanner DimensionsHeight: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended	Electrical Requirements	100-127V, AC 50/60 Hz, 4.0 amps			
Scanner with flatbed: 24 Vdc/3.7 A max, operating         Power Source       Phihong PSM 1564-240         IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up         Width: 62.5 cm (24.6 in.)       Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up         Scanner Dimensions       Mitting in the interval of the inter		200-240V, AC 50/60 Hz, 2.0 amps			
Power Source       Phihong PSM 1564-240         IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up         Width:       62.5 cm (24.6 in.)         Depth:       28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up         Source       68.1 cm (26.8 in.) with trays extended	Scanner Power	Scanner with ADF: 24 Vdc/4.2 A max, operating			
IMPORTANT: Do not substitute another power supply model or another manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.)         Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended		Scanner with flatbed: 24 Vdc/3.7 A max, operating			
manufacturer's power supply.         Scanner Dimensions       Height: 35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up         Width: 62.5 cm (24.6 in.)       Width: 62.5 cm (24.6 in.)         Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended	Power Source	Phihong PSM 1564-240			
35.4 cm (14.0 in.) without trays 36.4 cm (14.4 in.) with trays folded up Width: 62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended					
62.5 cm (24.6 in.) Depth: 28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended	Scanner Dimensions	35.4 cm (14.0 in.) without trays			
28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up 68.1 cm (26.8 in.) with trays extended					
Scanner Weight i250 Scanner: 12.5 kg (27.5 lb.)		28.7 cm (11.3 in.) without trays 30.0 cm (11.8 in.) with trays folded up			
	Scanner Weight	i250 Scanner: 12.5 kg (27.5 lb.)			
i260 Scanner: 13.9 kg (30.5 lb.)	-				

Dockable Flatbed Dimensions	Height: 16.3 cm (6.4 in.) Width: 48.6 cm (19.1 in.) Length: 64.3 cm (25.3 in.)			
Dockable Flatbed Weight	7.3 kg (16.0 lb.)			
Host Connection	IEEE-1394 (FireWire) interface, 6-pin connector			
Operating Temperature	15 to 35°C (59-95°F)			
Humidity	15 to 76% (dry bulb)			
Environmental Factors Feature	Energy Star compliant			
Power Consumption	i250/i260 Running: <156W			
	i250/i260 Energy Star: <12W			
Heat Load	600 BTU			
Altitude	Up to 2440 m (8000 ft)			
Acoustic Noise	<ul> <li>Data was measured in accordance with DIN 45 635, ANSI S12.10-1985, and ISO 7779 in a semi-anechoic chamber.</li> <li>Operating: &lt; 65 dB</li> </ul>			
	• Standby: < 40 dB			

Specification values apply to all of the i200 Series Scanners except where noted. All of these specifications are subject to change without notice.

Contact your scanner supplier to order supplies or visit us online at http://www.kodak.com/go/shop.

Item	Catalog No.
KODAK i200 Series Dockable Flatbed	130-5390
KODAK i200 Series Imprinter	892-7964
KODAK Feeder Consumables Kit for i200 Series Scanners	124-1066
KODAK Printer Ink Blotters for i200 Series Scanners (60)	840-5425
KODAK Printer Ink Cartridge Carrier for i200/i800/3000/4000/ 7000/9000 Series Scanners	838-4885
Kodak Digital Science Transport Cleaning Sheets (50)	169-0783
Kodak Digital Science Roller Cleaning Pads (24)	853-5981
Staticide Wipes for KODAK Scanners (144)	896-5519
KODAK Calibration Targets for i200/3000/4000 Series Scanners	127-1436

	The KODAK i200 Series Imprinter adds imprinting capability to your KODAK i200 Series Scanner. The imprinter prints a date, time, fixed string, and/or sequential number on document backs. Purchase the imprinter separately (Catalog No. 892-7964).				
	scanning on	r operates at full scanner speed, and prints on the document after the rear side of the document (top side as placed in the input ting is controlled through software.			
	IMPORTAN	T: Clean the scanner's internal components daily when you use the imprinter.			
	WARNING:	The imprinter access door must be in place and closed during scanner operation, except when changing the printhead location or replacing the ink cartridge.			
		When the imprinter access door is removed, DO NOT allow loose clothing, jewelry, hair, or other objects to enter the imprinter opening.			
Contents of the	The KODAK	i200 Series Imprinter kit contains the following items:			
Imprinter Kit	Imprinter board				
	Mounting bracket				
	Thumbscrews (4)				
	Imprinter cable				
	Ink cartridge carrier				
	Ink cartridge				
	Ink blotters (2)				
	Installation instructions				


## Installing the Imprinter

#### Removing the Circuit Board Cover

- 1. Make sure that the scanner is powered down and there are no documents in the feeder area.
- 2. Disconnect the power cord from the back of the scanner.
- 3. Disconnect the IEEE-1394 (FireWire) cable from the IEEE-1394 port on the back of the scanner.



- 4. Lift up the scanner door release to unlatch the scanner door.
- 5. Pull up to open the scanner door.
- 6. Remove the output tray.
- 7. Lift up the scanner door release again and open the scanner door past the circuit board cover.

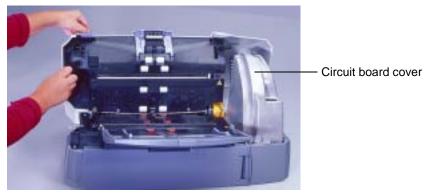

8. Use a Phillips-head screwdriver to remove the two screws (one front, one back) that hold the circuit board cover in place.

9. Lift up the circuit board cover and remove it.




10. Go to the next section to attach the imprinter board and cable.

#### Attaching the Imprinter Board and Cable


The imprinter board is first attached to a mounting bracket which is connected to the main control board, then the imprinter cable is plugged in.

IMPORTANT: Use proper precautions to avoid static when you install the imprinter card.


1. Place the imprinter board on the circuit board mounting bracket.

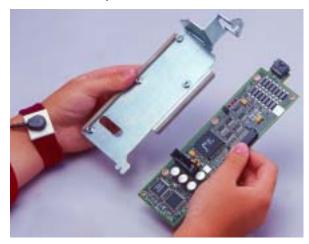

- 2. Align the three thumbscrews on the imprinter board with the corresponding holes on the circuit board mounting bracket.
- 3. Loosely attach the imprinter board to the circuit board mounting bracket with the three thumbscrews.

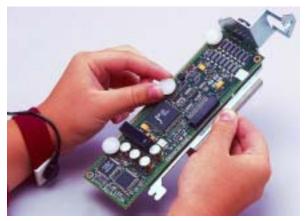

4. Slide the hook near the bottom of the circuit board mounting bracket into the support slot on the main control board.

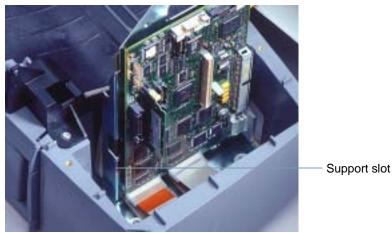


5. Press the imprinter board firmly into the main control board.



6. Attach and tighten the fourth thumbscrew on top of the circuit board mounting bracket.



- 7. Make sure that the imprinter board is seated and secure.
- 8. Tighten the three thumbscrews that connect the imprinter board and the circuit board mounting bracket.
- 9. Replace the circuit board cover.
- 10. Secure the circuit board cover with its two screws.
- 11. Locate the imprinter connector on the circuit board cover.

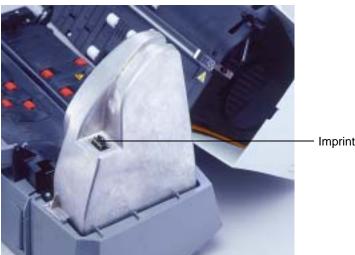

The imprinter connector should be protruding from the opening on top of the circuit board cover.

Imprinter connector

12. Attach the end of the imprinter cable that has the metal block (ferrite block end) to the connector in the opening on the circuit board cover.



- 13. Peel off the backing from the first self-stick hook-and-loop pad that is attached to the imprinter cable.
- 14. Align the imprinter cable along the channel in the circuit board cover and press the first self-stick hook-and-loop pad firmly to attach it to the circuit board cover.



15. Continue to align the imprinter cable along the channel in the circuit board cover until it is behind the circuit board cover.

- 16. Peel off the backing from the second self-stick hook-and-loop pad that is attached to the imprinter cable.
- 17. Press the second self-stick hook-and-loop pad firmly to attach it to the circuit board cover.



18. Thread the imprinter cable through the opening and into the imprinter area.



- 19. Lower the scanner door and press it down firmly until it latches into place.
- 20. Go to the next section to complete the imprinter installation.

#### Completing the Imprinter Installation

After installing the imprinter board and cable, you must seat the cable in its supports and install the ink cartridge and carrier.

IMPORTANT: An ink cartridge must be in the ink cartridge carrier in order for the imprinter to be recognized.

- 1. Locate the imprinter access door on the back of the scanner.
- 2. Slide your fingers under the imprinter access door handle and pull the door toward you.



- 3. Lift the imprinter access door off the scanner.
- 4. Pull the imprinter cable from the circuit board cover area carefully through and to the right across the imprinter area.
- 5. Thread the cable through the left and center imprinter cable supports, lining up the black lines on the imprinter cable with the supports.



This assures that the imprinter cable will not be pulled too tightly when the scanner door is opened.

- 6. Remove the ink cartridge from its packaging and purge it.
- NOTE: Detailed information about purging and installing ink cartridges may be found later in this chapter.
- 7. Place the purged ink cartridge in the ink cartridge carrier.
- 8. Lower the locking bar around the ink cartridge.
- 9. Push the connector on the imprinter cable firmly into the ink cartridge carrier.



10. Slide the ink cartridge carrier into the desired position.



- NOTE: Detailed information about setting the imprinter position may be found later in this chapter.
- 11. Replace the imprinter access door.
- 12. Re-attach the output tray.
- 13. Go to the next section to install the ink blotter strips in the scanner.

# Installing the Ink Blotter Strips

Two ink blotter strips in the scanner transport area collect ink overflow. NOTE: Improperly aligned blotter strips may cause paper jams.

- 1. Lift up the scanner door release to unlatch the scanner door.
- 2. Pull up to open the scanner door.
- 3. Locate the two channels in the rear of the transport area.

These channels are where the blotter strips will be installed.



- 4. Remove the backing from a new blotter strip.
- 5. Align the blotter strip in one of the channels.

NOTE: Improperly aligned blotter strips may cause paper jams.

- 6. Press the adhesive side of the blotter strip down firmly into the channel.
- 7. Repeat Steps 4-6 for the other strip.



8. Lower the scanner door and press it firmly until it snaps into place.

# Purging an Ink Cartridge

One ink cartridge is included with your i200 Series Imprinter. You must purge the ink cartridge before installing it.

- 1. Remove the ink cartridge from the box and inner packaging.
- 2. Hold the cartridge and insert a straightened paper clip into the larger hole on the top of the ink cartridge.



- 3. Rotate the ink cartridge until the bottom is face up.
- 4. Gently press the paper clip against the side of the ink bladder until a small bead of ink appears on the ink flow point on the ink cartridge bottom.

#### CAUTION: Do not puncture the ink bladder with the paper clip.



- 5. Remove the paper clip.
- 6. Allow the ink bead to absorb back into the ink cartridge.
- 7. Blot the excess ink with a lint-free tissue.

CAUTION: Do not touch the ink flow point or you may cause improper ink flow.

# Installing an Ink Cartridge

You must purge the ink cartridge before installing it (refer to "Purging an Ink Cartridge" in this chapter).

- 1. Locate the imprinter access door on the back of the scanner.
- 2. Slide your fingers under the imprinter access door handle and pull the door toward you.
- 3. Lift the imprinter access door off the scanner.
- 4. Slide the ink cartridge carrier out of its position.
- 5. Raise the locking bar.
- 6. Remove the empty ink cartridge, if one is present.
- NOTE: Dispose of empty ink cartridges properly. Do not incinerate ink cartridges.
- 7. Insert a new, purged ink cartridge.
- 8. Lower the locking bar around the ink cartridge.




- 9. Slide the ink cartridge carrier into its position.
- NOTE: You may change the ink cartridge carrier positions. Refer to the following section, "Setting the Imprinter Position."
- 10. Replace the imprinter access door.

# Setting the Imprinter Position

There are 14 possible positions for the imprinter. Make sure that the imprinter is in the correct position for your documents.

- 1. Locate the imprinter access door on the back of the scanner.
- 2. Slide your fingers under the imprinter access door handle and pull the door toward you.
- 3. Lift the imprinter access door off the scanner.
- 4. Locate the imprinter positioning slots.
- 5. Determine which position is suitable for your imprinting needs.

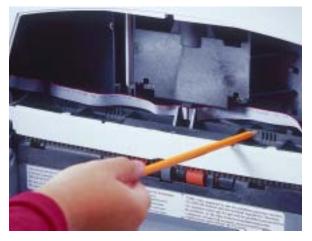

- 6. Lift the ink cartridge carrier out of its position.
- 7. Slide the ink cartridge carrier into the desired position.
- 8. Replace the imprinter access door.

Imprinter Maintenance	The ink cartridges, ink blotter strips, and ink cartridge carrier used in the imprinter will need replacing occasionally.
Imprinting Problems	If you are having problems imprinting on scanned documents:
	• The tip of the ink cartridge may be plugged. Purge (prime) the ink cartridge (refer to "Purging an Ink Cartridge" in this chapter). If the ink still does not flow properly, replace the ink cartridge. Dispose of used ink cartridges properly.
	<ul> <li>Verify that the ink cartridge is not empty. The ink bladder inside the cartridge is flat when it is empty.</li> </ul>
	<ul> <li>Make sure that the ink cartridge is properly installed in the imprinter.</li> </ul>
	<ul> <li>Make sure that the ink cartridge is located in the correct position for imprinting.</li> </ul>
	<ul> <li>Make sure that the ink cartridge carrier is properly seated in its positioning slot.</li> </ul>
	<ul> <li>Verify that all imprinter connectors are securely fastened and that the imprinter cables are not folded or creased.</li> </ul>
Expected Life of Imprinter Components	<ul> <li>Imprinter ink cartridge: approximately 750,000 non-bold characters per cartridge</li> </ul>
	<ul> <li>Ink blotter strips: replace as necessary when soiled</li> </ul>
	Ink cartridge carrier: approximately 500,000 pages
When the Imprinter Is Not in Use	When the imprinter is not being used, place the ink cartridge on its side so that ink does not drip down on the blotter strips.
Replacing an Ink Cartridge	Refer to "Installing an Ink Cartridge" in this chapter for information about replacing an empty ink cartridge.
	Purchase ink cartridges from an office supply retailer near you.

#### Replacing the Ink Blotter Strips

Two ink blotter strips in the scanner collect ink overflow. These strips should be replaced as necessary. To order additional ink blotter strips, refer to Appendix B, *Supplies and Accessories*.

NOTE: Improperly aligned blotter strips may cause paper jams.

- 1. Power down the scanner.
- 2. Disconnect the power cord.
- 3. Remove any documents from the feeder area.
- 4. Lift up the scanner door release to unlatch the scanner door.
- 5. Pull up to open the scanner door.
- 6. Locate the two ink blotter strips in the rear of the transport area.



7. Grasp a blotter strip and carefully pull it off.



- 8. Discard the soiled strip.
- 9. Remove the other blotter strip and discard it.

- 10. Remove the backing from a new blotter strip.
- 11. Align the blotter strip in one of the channels.
- 12. Press the adhesive side of the blotter strip down firmly into the channel.
- 13. Repeat Steps 10-12 for the other strip.



14. Lower the scanner door and press it firmly until it snaps into place.

To order ink cartridge carriers, refer to Appendix B, Supplies and Accessories.

- 1. Locate the imprinter access door on the back of the scanner.
- 2. Slide your fingers under the imprinter access door handle and pull the door toward you.
- 3. Lift the imprinter access door off the scanner.
- 4. Slide the ink cartridge carrier out of its position.
- 5. Raise the locking bar.
- 6. Remove the ink cartridge, if one is present.
- 7. Squeeze the metal strips on the connector and pull the connector away from the ink cartridge carrier.
- 8. Push the connector firmly into a new ink cartridge carrier.
- 9. Replace the ink cartridge.
- 10. Lower the locking bar around the ink cartridge.
- 11. Slide the ink cartridge carrier back into its position.
- 12. Replace the imprinter access door.

# Replacing the Ink Cartridge Carrier

#### **Imprinting Overview**

Many applications with capture needs up to 10,000 pages per day, particularly in the finance, insurance, and public administration industries, require an imprinter. Furthermore, forms processing applications in all areas can benefit from the use of an imprinter.

The KODAK i200 Series Imprinter is unique in that the document print string can be configured to include both literal (static) information (i.e., information that stays the same for each document, such as batch name, scan station, or operator) and dynamic information (i.e., information that may change for each page scanned, such as sequential document number). Software controls static fields; any information that the software allows you to enter can be sent to the imprinter. The imprinter can be manually placed in 14 horizontal positions.

All imprinter controls and functions are accessible through ISIS and TWAIN drivers. Imprinting must be enabled or disabled for each scan session. A maximum of 40 characters, which can include any alphanumeric and special characters from the printable character set (see chart below), is allowed. Imprinter information is posted to an image header record, which is accessible via the host computer.

	Printable Character Set														
blank	!	"	#	\$	%	&	"	À	Á	Â	Ã	Ä	Å	Æ	Ç
(	)	*	+	,	-		/	È	É	Ê	Ë	Ì	Í	Î	Ϊ
0	1	2	3	4	5	6	7	Ð	Ñ	Ò	Ó	Ô	Õ	Ö	×
8	9	:	;	<	=	>	?	Ø	Ù	Ú	Û	Ü	Ý	Þ	ß
@	А	В	С	D	Е	F	G	à	á	â	ã	ä	å	æ	Ç
Н	Ι	J	Κ	L	М	Ν	0	è	é	ê	ë	ì	í	î	ï
Р	Q	R	S	Т	U	V	W	ð	ñ	ò	ó	ô	õ	ö	÷
Х	Y	Ζ	[	١	]	۸	_	Ø	ù	ú	û	ü	ý	þ	ÿ
``	а	b	С	d	е	f	g	i	¢	£	¤	¥		§	
h	i	j	k	I	m	n	0	©	а	«	٦	-	R	-	
р	q	r	S	t	u	v	W	±	2	3	,	μ	¶	•	
х	у	z	{		}	۲	"	1	0	»	1⁄4	1⁄2	3⁄4	ż	
,		0	ذ												

Characters can be printed in two orientations, Cine (no rotation) or Comic (90° rotation), and two sizes, Small (regular) and Large (bold), and are designed to fit seven characters per inch when printed in Comic orientation. Imprinting cannot be done within 0.89 cm (0.35 in.) of the leading or trailing edge of the document.



orientation

orientation

Print Characters

The resolution of the character fonts is 96 dpi across the width of the scanner. However, the font resolution varies with the direction that the paper is fed into the scanner. This variable allows the creation of an easy-to-read character string. The approximate resolution of the printed output is shown below.

Resolution (dpi)						
Small Large						
Cine	85 dpi	63 dpi				
Comic	115 dpi	85dpi				

Changes to the print string, other than automatic, sequential number advances, require a host command to restart the imprinter. You must initiate a change between documents or batches. Changes cannot be done automatically or between documents "on the fly."

NOTE: The minimum document width for using the imprinter is 14 cm (5.5 in.).

## Imprinter Specifications

Maximum lines	1
Print locations (horizontal)	14, manually set
Print locations (vertical)	Set by host
Print orientation	Cine or Comic
Font size	Large or Small
Ink cartridge	HP51604A or compatible
Print side	Rear (post-scan)
Minimum imprinting distance from document edge	0.89 cm (0.35 in.)
Static fields available	User-specified via host
Dynamic fields available	Up to nine-digit sequential document number, date, four-digit time
Languages supported	Any phonetic language (for example, Danish, Dutch, English, Finnish, French, German, Italian, Norwegian, Portuguese, Spanish, Swedish)

The KODAK i200 Series Dockable Flatbed is an A3 flatbed that adds scanning capability for exception documents to your i200 Series Scanner. Purchase the flatbed separately (Catalog No. 130-5390).



# Contents of the Dockable Flatbed Kit

The KODAK i200 Series Dockable Flatbed kit contains the following items:

- KODAK i200 Series Dockable Flatbed
- Installation instructions

Flatbed Specifications	Dimensions	Height:	16.3 cm (6.4 in.)
		Width:	48.6 cm (19.1 in.)
		Length:	64.3 cm (25.3 in.)
	Weight	7.3 kg (1	6.0 lb.)

## Installing the Dockable Flatbed

The Dockable Flatbed is easy to attach to your i200 Series Scanner.

- 1. Power down the scanner.
- 2. Raise the input tray and rest it against the scanner.
- 3. Locate the scanner front panel latch and pull it to the left.




4. Remove the scanner front panel.



IMPORTANT: The scanner will not operate if the dockable flatbed is not securely attached.

5. Slide the flatbed close to the opening.

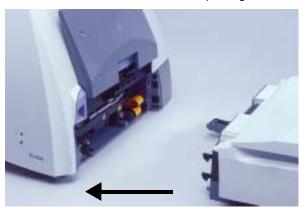

- 6. Push the flatbed against the scanner until the docking latches click into place.
- 7. Attach the scanner front panel to the mounting posts on the back of the flatbed for storage.

You will need to re-attach this panel to the scanner if you remove the flatbed from the scanner.

8. Power up the scanner.

The flatbed is ready to use.



NOTE: Lower the input tray when you are going to use the automatic document feeder instead of the flatbed.

#### **Using the Flatbed**

Use the flatbed to scan documents that cannot be scanned using the automatic document feeder (ADF).

- 1. Raise the input tray and rest it against the scanner, if necessary.
- 2. Lift the flatbed cover and hold it up.
- 3. Place the document face down on the glass platen.
- 4. Position the document with the corner aligned with the arrow.



Arrow

- 5. Close the flatbed cover.
- 6. Start scanning.

#### **Book Scanning**

You can use the flatbed to scan thick or bound documents, such as books. The flatbed cover rises to accommodate bound materials. It can also be lifted off and removed to allow scanning very thick books.

- 1. Raise the input tray and rest it against the scanner, if necessary.
- 2. Lift the flatbed cover and hold it up.
- 3. Place the book face down on the glass platen.



- 4. Position the book with the corner aligned with the arrow.
- 5. Close the flatbed cover.
- 6. Start scanning.

#### **Calibrating the Flatbed**

Calibration optimizes the optical system in your scanner in order to achieve the best overall quality of scanned images. Frequent calibration is not needed or recommended.

NOTES: You must calibrate the ADF before you can calibrate the flatbed.

The screens shown in this section are for the TWAIN driver. Your screens may be different.

- 1. Allow the lamps to warm up for three minutes.
- 2. Click on **Calibrate** in the Imaging tab.

Randal Sciencer P	superfiles (Sould See	International		1918
maphip Pages   Cam State Lane Prior Lane Prior Moret Prior Manual Prior Manual	Personal Dagonal Haldh Marananan Marananan Maranan Maranan Maranan Maranan Maranan Maranan Maranan	et ( Options) Press   Log.   /	ی بر	म मन्त्र
Stamo	Date			
Page Trans	407	-		
(Pagita cikile one any link	l'he get helje erformaliket alen		California	
Delasti Cox	w		OK	Canodi

The Image Chain Calibration dialog box appears.



#### 3. Click Calibrate.

A message appears.



4. Place the calibration target in the scanner ADF.

Use the 30.5 cm (12 in.) square calibration target (Catalog No. 127-1436) that is included with your scanner.

5. Click **OK**.

Calibration begins. A message appears when the ADF calibration has finished.

brage Chile	Collection .	22
Rosan minove Flatbert, Larris	the calibration carget in the ADF code, alterup, and then click on DK.	the endplace i at the
Contraction of the second	UK Caread	<u>13</u>

- 6. Raise the scanner's input tray and rest it against the scanner.
- 7. Lift the flatbed cover and hold it up.
- 8. Place the calibration target face down on the glass platen.
- 9. Position the calibration target with the corner aligned with the arrow.
- 10. Close the flatbed cover.
- 11. Click OK.

Calibration begins. A message appears when the flatbed calibration has finished.

Image Chain Calibration	7 🕱
Calbraton racconduit.	

12. Click OK.

**Cleaning the Flatbed** The flatbed's glass platen can collect fingerprints and dust which may lessen the quality of your scans. Use Staticide Wipes for KODAK Scanners (Catalog No. 896-5519) to clean the platen glass.

- 1. Open the flatbed cover.
- 2. Wipe the platen glass with a Staticide Wipe.
- 3. Dry the platen glass with a lint-free cloth.
- 4. Close the platen cover.


#### After a Power Failure

If power is interrupted while you are using the flatbed, the scanner camera may not be in its home position. Do not remove the flatbed if this has occurred. Once power has been restored, power up the scanner so that the camera can return to its home position.

# Removing the Dockable Flatbed


The flatbed is easy to remove from your i200 Series Scanner. IMPORTANT: Do not attempt to undock the flatbed while it is in use.

- 1. Power down the scanner.
- 2. Raise the input tray and rest it against the scanner.
- 3. Squeeze the latches on the lower sides of the flatbed.

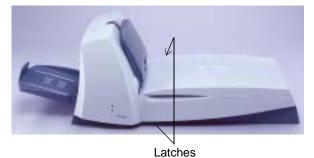

The docking latches disengage from the scanner.

4. Pull the flatbed away from the scanner.

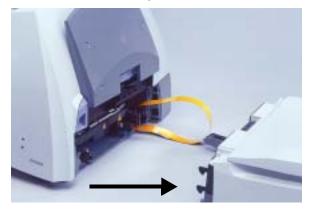


- 5. Remove the scanner front panel from its storage place on the back of the flatbed.
- 6. Place the flatbed in its original packaging for storage.

7. Tuck the flexible cable back into the scanner.



Make sure that you do not bend or fold the flexible cable.

8. Align the scanner front panel pins with the slots on the scanner.

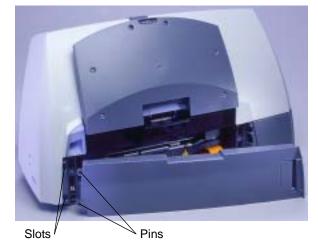

9. Press firmly against the right side of the door to latch it.

IMPORTANT: The scanner will not operate if the front panel is not securely attached.

- 10. Lower the input tray.
- 11. Power up the scanner.

The scanner comes installed with 64 MB of memory. This may be sufficient for your scanning needs. However, up to 256 MB of memory (SODIMM) may be installed in the scanner to accommodate long document scanning or scanning with certain scanner features (e.g., auto-crop at 300 dpi or higher).

Maximum document sizes:

- With standard memory (64 MB): 29.7 x 43.2 cm (11.7 x 17 in.)
- With extended memory (256 MB): 29.7 x 66.0 cm (11.7 x 26.0 in.)


IMPORTANT: Use proper precautions to avoid static when you install memory.

- 1. Power down the scanner.
- 2. Remove any documents from the feeder area.
- 3. Disconnect the power cord from the back of the scanner.



- 4. Disconnect the IEEE-1394 (FireWire) cable from the IEEE-1394 port on the back of the scanner.
- 5. Remove the scanner's output tray.
- 6. Lift up the scanner door release to unlatch the scanner door.
- 7. Pull up to open the scanner door.


8. Lift up the scanner door release again and open the scanner door past the circuit board cover.

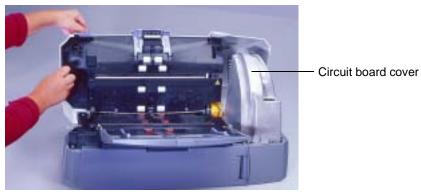

- 9. Use a Phillips-head screwdriver to remove the two screws (one front, one back) that hold the circuit board cover in place.
- NOTE: If the optional imprinter has been installed, disconnect the imprinter cable from the imprinter board before you remove the circuit board cover. Refer to Appendix C, *KODAK i200 Series Imprinter*, for information about the imprinter cable.
- 10. Lift up the circuit board cover and remove it.



11. Remove the existing memory card from the main control board.

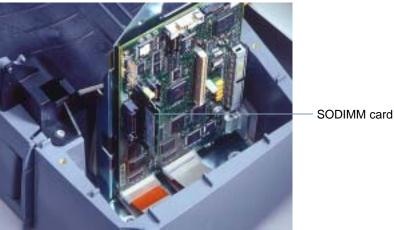

- 12. Plug the new SODIMM card into the main control board.
- 13. Replace the circuit board cover.
- 14. Secure the circuit board cover with its two screws.
- NOTE: If you removed the optional imprinter cable from the imprinter board, reinstall the cable now. Refer to Appendix C, KODAK i200 Series Imprinter, for information about the imprinter cable.
- 15. Lower the scanner door and press it down firmly until it latches into place.
- 16. Re-attach the scanner's output tray.
- 17. Re-attach the IEEE-1394 cable to the IEEE-1394 port on the back of the scanner.
- 18. Re-attach the power cord.

#### EASTMAN KODAK COMPANY Document Imaging Rochester, New York 14650

www.kodak.com/go/docimaging

Kodak, Digital Science and the ds monogram symbol are trademarks of Eastman Kodak Company.

A-61167 9/2002 Cat. No. 850-7543 ©Eastman Kodak Company, 2002

